



HANDHELD TIRE GAGE

OPERATION

- 1. Consult your vehicle's manual for correct tire pressure. Check pressure when tires are cool.
- 2. Press the "ON" button. Wait for "0.0PSI" or "0.00BAR" or "OKPA" to appear.
- 3. Unit can be changed by pressing the "ON" button after the gage is turned on.
- 4. Ensure to have a good seal between the nozzle and the valve by pressing firmly. Assure that there is no hissing sound of air leakage when pressing nozzle onto valve.
- 5. Wait for 3 seconds. Remove the nozzle from the valve and see an accurate display of your tire pressure.
- 6. Wait for 3 seconds after your previous measurement to carry out your next measurement.
- 7. Gage will be automatically shut down 90 seconds after it is turned on.
- 8. Gage can also be manually turned off by pressing the "ON" button for 3 to 5 seconds.

SPECIFICATIONS

Service: Compatible gases.

Accuracy: ±1% FS.

Pressure Range: 2 to 100 psi (0.15 to 6.90 bar). Temperature Limits: 32 to 104°F (0 to 40°C). Process Connection: Tire valve stem or equivalent.

Display: 3-1/2 digit, 1/4" backlit LCD. Shutoff: 90 seconds.

Power Requirements: (4) 1.5 V LR44 alkaline batteries,

installed functional, non-replaceable.

Weight: 0.10 lb (0.05 kg).













