



QUICK SET-UP SHEET



Wire per wiring diagram on unit.
(Also page 3 of instruction manual)

Home Display at Power Up



Note: To see full scale range of unit press **E** at home display.

SET DE-ACTIVATION (*SPL*) AND ACTIVATION (*SPH*) SET POINTS (Relay A on wiring diagram)

To set *SPL*

press **SPIAL** button once. You will see:

Example View

(Numbers may be different depending on unit purchased).



To adjust press **E**. *SPL* will blink. Press **▼** or **▲** as desired. Press **E** when finished adjusting to save reading. *SPL* will stop blinking.

Example of New *SPL* Setting

continued over →





To set *SPIH*

From *SPIH* screen press  button once. You will see:

Example View


(Numbers may be different depending on unit purchased).



To adjust press . *SPIH* will blink. Press  or  as desired. Press  when finished adjusting to save reading. *SPIH* will stop blinking.

Example of New *SPIH* Setting



Press  to return to the home display. You now have programmed the Digihelic[®] control to activate relay A at 4.500[°] w.c. and de-activate at 1.500[°] w.c.

To change engineering units select velocing or flow modes, set relay B for set point control or alarm modes, select security levels, calibrate the unit, and many more, see main instruction manual.