


Series L10 Flotect™ Mini-Size Level Switch

Specifications - Installation and Operating Instructions







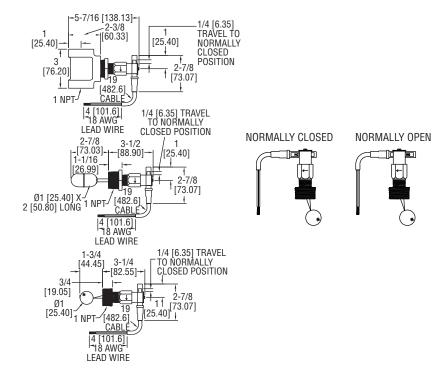

SPECIFICATIONS

Service: Compatible liquids. Wetted Materials:

Float: Solid polypropylene or 304 SS; Body: Brass or 303 SS; Magnet: Ceramic;

External float chamber (tee): None, brass, or 304 SS; Other: Lever arm, pin, spring, etc.: 301 SS, 302 SS, 316 SS

Temperature Limit: 200°F (93°C). Pressure Limit: See model chart. Enclosure Rating: Weatherproof, meets NEMA 4X (IP66).

Switch Type: SPST hermetically sealed reed switch. Field adjustable for normally open or normally closed. Electrical Rating: 1.5 A @ 24 VDC res., 0.001 A @ 200 VDC res., 0.5A @ 125 VAC.

Electrical Connections: 18 AWG, 19' (483 mm) long, PVC jacket. Rated 221°F (105°C).

Process Connection: 1" male NPT standard on models without external float chamber. Change 3 in model number to 4 for 1-1/4", to 5 for 1-1/2", or 6 for 2". 1" female NPT on models with external float chamber.

Mounting Orientation: Horizontal with index arrow pointing down.

Weight: Approximately 10 oz (0.283 kg) without external float chamber, 2.32 lb (1.05 kg) with external float chamber.

Specific Gravity: See model chart.

Agency Approvals: UL and CSA.

Switch Enclosure: Nylon.

Model	Body	Installation/	Float	Max. Press.	Min.
Number	Material	Mounting	Material	psig (bar)	S.G.
L10-B-3-O	Brass	Side Wall	Solid Polypropylene	1000 (68.9)	0.9
L10-B-3-A	Brass	Side Wall	Cylindrical St. Steel	200 (13.8)	0.5
L10-B-3-C	Brass	Side Wall	Round St. Steel	350 (24.1)	0.7
L10-B-3-B	Brass	Ext. Tee	Solid Polypropylene	250 (17.2)	0.9
L10-B-3-H	Brass	Ext. Tee	Round St. Steel	250 (17.2)	0.7
L10-S-3-O	St. Steel	Side Wall	Solid Polypropylene	2000 (137.8)	0.9
L10-S-3-A	St. Steel	Side Wall	Cylindrical St. Steel	200 (13.8)	0.5
L10-S-3-C	St. Steel	Side Wall	Round St. Steel	350 (24.1)	0.7
L10-S-3-S	St. Steel	Ext. Tee	Solid Polypropylene	2000 (137.8)	0.9
L10-S-3-L	St. Steel	Ext. Tee	Round St. Steel	350 (24.1)	0.7

INSTALLATION

- Unpack switch and remove any packing material found inside lower housing or float chamber (tee).
- WARNING Mechanical shock and vibration can cause damage to the reed switch. Care should be taken to avoid dropping the switch on hard surfaces or impacting the switch assembly.
- 3. Switch must be installed with body in a horizontal plane with arrow on side of body pointing down.
- 4. If switch has an external float chamber (tee), connect it to vertical sections of 1" NPT pipe installed outside vessel walls at appropriate levels. If unit has no external float chamber, it must be mounted in a 1" NPT half coupling welded to the vessel wall. The coupling must extend through the wall. Use Teflon® thread tape or pipe joint compound to assure a good seal.
- 5. Connect the wiring in accordance with local electrical codes.
- 6. Inductive, capacitive and lamp loads can all create conditions harmful to the reed switch.

- A) <u>Inductive loads</u> can be caused by electromagnetic relays, electromagnetic solenoids and electromagnetic counters, all with inductive compenents as the circuit load.
- B) <u>Capacitive</u> loads can be caused by capacitors connected in series with or parallel to the reed switch. IN a closed circuit, the calbe length (150 ft or more) to the switch can introduce a capacitance.
- C) <u>Lamp loads</u> can be caused by switching lamp filaments which have low cold resistance.

In addition to these causes, exceeding any of the maximum electrical ratings can lead to premature or immediate failure. This includes inrush and surge currents greater than the maximum switching current. To accommodate these conditions, see diagrams on the reverse for possible solutions.

7. After installation, set the switch action to \underline{NO} (normally open) or \underline{NC} (normally closed). Normally open contacts close and normally closed contacts open when liquid level in the vessel lifts the float past the actuation point. To change, loosen, but do not remove, the two screws on the switch cap. Slide the reed switch assembly to expose the switch action needed. Tighten screws when adjustment is complete.

www.dwyer-inst.com

e-mail: info@dwyer-inst.com

Phone: 219/879-8000

Fax: 219/872-9057

CIRCUIT INFORMATION FOR REED SWITCH PROTECTION

READ INFORMATION BELOW BEFORE INSTALLING YOUR NEW REED SWITCH CONTROL!


Exceeding the current capacity of this Reed Switch control may cause <u>FAULTY OPERATION!</u> Be aware of the inductive and capacitive or lamp loads you may be placing on you Reed Switch Control. The circuits below outline possible solutions to preventing overloads due to inrush or surge currents exceeding maximum or when the switch current and product of the lamps (low "cold" resistance) is outlined below. Failure to follow these measures to protect Reed Switch Contacts may cause the contacts to weld together or result in premature wear.

Possible Circuit Solutions Indicated by Dashed Lines

Inductive Loads

Possible causes -


An electromagnetic relay, electromagnetic solenoid, electromagnetic counter with inductive component as circuit load.

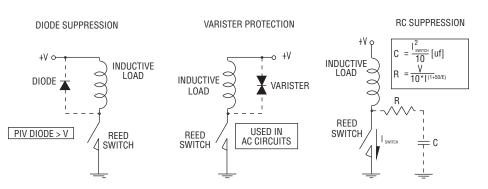

Capacitive Loads

Possible causes -


A capacitor connected in series or parallel with Reed Switch control. In a closed circuit, a cable length (usually greater than 50m [162.5 ft.]) used to connect reed switch may also introduce static capacitance.

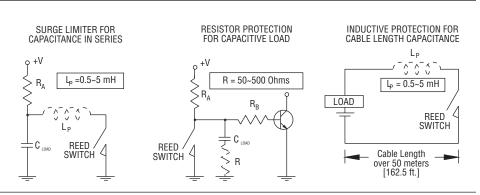

Lamp Loads


Possible causes –

A tungsten filament lamp load.



CURRENT LIMITING RESISTOR





MAINTENANCE/REPAIR

Upon final installation of the Series L10, no routine maintenance is required. The Series L10 is not field serviceable and should be returned if repair is needed. Field repair should not be attempted and may void warranty.

WARRANTY/RETURN

Refer to "Terms and Conditions of Sales" in our catalog and on our website. Contact customer service to receive a Return Goods Authorization number before shipping the product back for repair. Be sure to include a brief description of the problem plus any additional application notes.

©Copyright 2011 Dwyer Instruments, Inc.

Printed in U.S.A. 11/11

FR# 82-440851-00 Rev. 2

W.E. ANDERSON DIV., DWYER INSTRUMENTS, INC. P.O. BOX 358 • MICHIGAN CITY, INDIANA 46361 U.S.A.

Phone: 219/879-8000 www.dwyer-inst.com Fax: 219/872-9057 e-mail: info@dwyer-inst.com